

EVSU1040

RS232 Protocol and Commands

| | |
|-------------|--------|
| Baudrate: | 115200 |
| Data Width: | 8 bit |
| Parity: | None |
| Stop: | 1 bit |

Mode Select

| | |
|-----------|--|
| Quad View | A5 5B 08 05 00 00 00 00 00 00 00 00 F3 |
| Tile | A5 5B 08 05 01 00 00 00 00 00 00 00 F2 |
| Switcher | A5 5B 08 05 02 00 00 00 00 00 00 00 F1 |

Main Input

| | |
|---------|--|
| Input 1 | A5 5B 02 03 01 00 01 00 00 00 00 00 F9 |
| Input 2 | A5 5B 02 03 02 00 01 00 00 00 00 00 F8 |
| Input 3 | A5 5B 02 03 03 00 01 00 00 00 00 00 F7 |
| Input 4 | A5 5B 02 03 04 00 01 00 00 00 00 00 F6 |

NOTE: When in Quad view mode, the Main Input command will select the main audio. When in Tile Mode the Main Input command will select the audio and video for the larger main picture.