



1. Use stripping tool to strip cable jacket. Accepts 23-24 AWG wires, about 40 mm.



2. Use stripping tool to punch down twist wires into IDC, refer to the wiring label for related wire punching position.

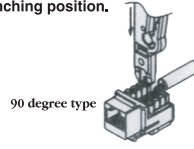

3. Use a trimmer to trim the excess wires.



4. Cover the IDC with the enclosed CAP, to hold wires securely in position



NUMBER OR LINES TO HOOK UP	POSSIBLE TYPES OF WIRE EXISTING IN BUILDING	
	6 SOLID COLOR NON-TWISTED WIRES	MULTI-LINE TWISTED PAIR WIRE
1	GREEN	WHITE W/BUE STRIPES
1	RED	BLUE
2	BLACK	WHITE W/ORANGE STRIPES
2	YELLOW	ORANGE
3	WHITE	WHITE W/GREEN STRIPES
3	BLUE	GREEN

Note 1: Multi-line service must be "enabled" by your telephone company.