



1. Use stripping tool to strip cable jacket. Accepts 23-24 AWG wires, about 40 mm.




2. Use stripping tool to punch down twist wires into IDC, refer to the wiring label for related wire punching position.

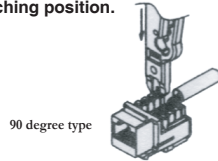

3. Use a trimmer to trim the excess wires.



4. Cover the IDC with the enclosed CAP, to hold wires securely in position

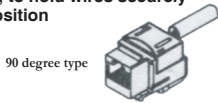

BUNCH DOWN Terminals		T568A Pair/Wire Color	T568B Pair/Wire Color
<ul style="list-style-type: none"> □ PIN 1 □ PIN 2 	3	<ul style="list-style-type: none"> White/Green Green 	<ul style="list-style-type: none"> 2 White/Orange Orange
<ul style="list-style-type: none"> □ PIN 5 □ PIN 4 	1	<ul style="list-style-type: none"> White/Blue Blue 	<ul style="list-style-type: none"> 1 White/Blue Blue
<ul style="list-style-type: none"> □ PIN 3 □ PIN 6 	2	<ul style="list-style-type: none"> White/Orange Orange 	<ul style="list-style-type: none"> 3 White/Green Green
<ul style="list-style-type: none"> □ PIN 7 □ PIN 8 	4	<ul style="list-style-type: none"> White/Brown Brown 	<ul style="list-style-type: none"> 4 White/Brown Brown